
# STANDARD K. D. 16-PERSON STOCK LOCKER ASSEMBLY INSTRUCTIONS

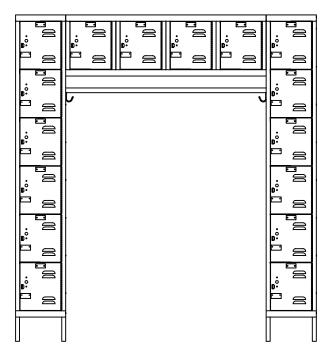

# **General Instructions**

- Check material received against the packing list. First check the number of packages received and then
  check the contents of each package.
- 2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
- Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.
- 5. Items with suffix (xx) are available options.

# **CAUTION**

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.

FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.



401 Jim Moran Blvd., P.O. Box 4157 Deerfield Beach, FL 33442

Phone (954) 429-9662 Fax (954) 428-3843

www.ArtMetalProducts.com

# STANDARD K. D. 16-PERSON STOCK LOCKER ASSEMBLY INSTRUCTIONS

PACKAGE CONTENTS					
REF. NO.	DESCRIPTION	PART NO.	QTY.	20	
1	REAR PANEL	KR1272	2	\$	
	RIGHT/LEFT SIDE PANEL	KP1872-16P	4	· ·z.	
3	TOP/BOTTOM SHELF	KS1218	4		
4	INTERMEDIATE SHELF	KH1218	10		
(4) (5)	DOOR FRAME ASSEMBLY	LKDF1278-6LV	2	(22)	
×6	DOOR	LKD1272-6LV	16	(18)	
7	BOX DOOR LATCH PULL	KBLP100	16		
xxx (8)	NUMBER PLATE	NPA-E	16		20
9	NUMBER PLATE RIVET	RV101	32		$\bigcup$
××10	STRIKE PLATE	××SP100	××16		17)
	REAR LEG	KLG	4	(b)	
12	3/8" SLOTLESS BOLT	MBT200	244	$\mathbf{J}$	3
13	HEX NUT	N201	212	CENTER 4-WIDE SECT	TION
14	HI-DOME CAP NUT	N110	32		
× (15)	PIANO HINGE	PH11	16		
(f) (17)	COAT ROD HOOK	н8К	2	(5)	<b>5</b>
	COAT ROD	KCR48	1		
18	DOOR FRAME ASSEMBLY	LKDF4812-16LV	1		
(E)	CENTER REAR PANEL	KR16CP	1		
20	CENTER BOTTOM	KP16CB18	1		
21	CENTER TOP	KP16CT18	1		
22	CENTER SIDE PANEL	KP16CS18	3	2	
× 23	RIVET (HINGE)	RV102	32		
				3 1	3 11
				LEFT 6-TIER TOWER	RIGHT 6-TIER TOWER

## NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS, SEE SUPPLEMENTAL INSTRUCTION SHEET NO. PKAMP01-A

- × SHIPS PRE-HUNG IN FRAME ASSEMBLY.
- ×× STRIKE PLATES ARE OPTIONAL INCLUDES TWO RIVETS (9).

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. PKAMP01-B


\*\*\* CUSTOMER TO SPECIFY NUMBER SEQUENCE.

#### TWO-YFAR WARRANTY


ART METAL PRODUCTS KD LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.




#### STANDARD K.D. 16-PERSON STOCK LOCKER ASSEMBLY INSTRUCTIONS

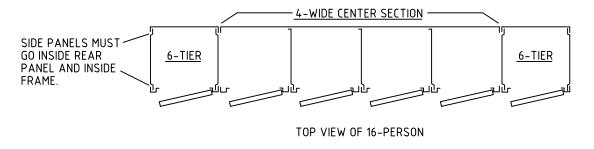


# 6-TIER LEFT AND RIGHT TOWER SECTIONS FINGER TIGHTEN ONLY UNTIL FINAL ASSEMBLY

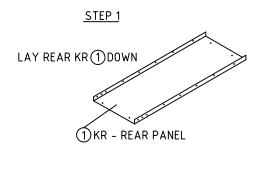

STEP 2

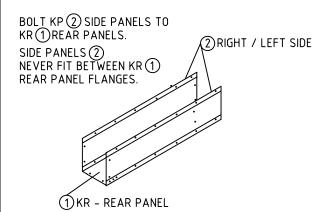

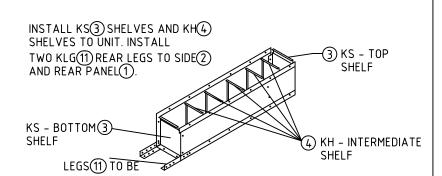

STEP 3

BOLT DOOR AND FRAME(5) ASSEMBLIES
TO KS(3) SHELVES AND KP(2) SIDE PANELS.
STAND UNIT UP AND ALIGN LOCKER
TOPS EVENLY. TIGHTEN ALL BOLTS
AND NUTS.
NOTE: LEAVE TOP HAT SHELF OF
6-TIER UNFASTENED UNTIL CENTER
SECTION FRAME IS BOLTED IN PLACE.

ART METAL PRODUCTS MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE. HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM ART METAL PRODUCTS. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

# PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST

COLOR

PURCHASE DATE

COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM


IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.




# STANDARD K.D. 16-PERSON STOCK LOCKER ASSEMBLY INSTRUCTIONS

#### CENTER SECTION

#### STEP 5

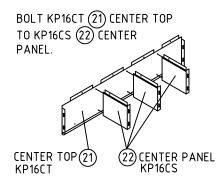


#### STEP 7

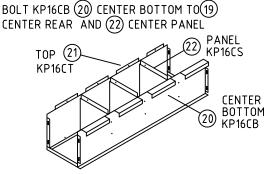


#### STEP 9


WITH REAR OF CENTER SECTION ON A FLAT SURFACE, ATTACH TO LEFT AND RIGHT 6-TIER LOCKERS USING 10-24 x 1/2" BOLTS THRU HOLES SHOWN.

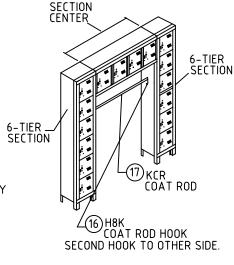

### STEP 6

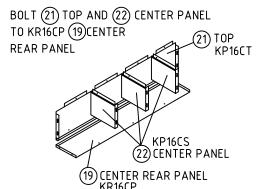

#### STEP 8

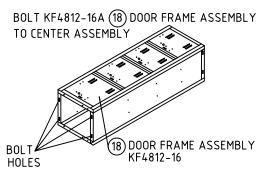

STEP 10 STAND LOCKER UPRIGHT.


#### **STEP 11**

HOOKS TO BE BOLTED TO SIDE PANELS WITH COAT ROD IN BETWEEN.


- (6) COAT ROD HOOK H8K
- ① COAT ROD KCR48



#### STEP 12

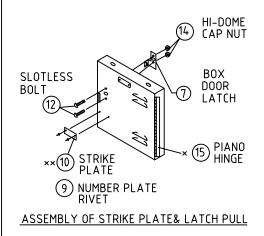

#### <u>STEP 13</u>

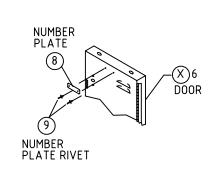

ASSEMBLY OF NUMBER PLATE

## HARDWARE USED FOR MAIN LOCKER ASSEMBLY



10 - 24 x 3/8"

MBT200 SLOTLESS BOLT (12)

N201 HEX NUT (13)

401 Jim Moran Blvd., P.O. Box 4157: Deerfield Beach, FL 33442

TIGHTEN NUT WITH A NUT DRIVER OR WRENCH (SCREW IS TAMPER RESISTANT).

AMP Art Metal Products TOOLS REQUIRED: 3/8" NUT DRIVER (3/8" SOCKET MAY BE SUBSTITUTED)