
NOTES

1) PLACE TEMPLATE ON TOP OF LOCKER UPPER SHELF

2) DETERMINE WHICH ORIENTATION SHOULDER PAD RACK SHOULD BE, AS SHOWN IN TOP VIEW

- 3) DRILL 1/8" DIA BLIND HOLES IN TOP OF LOCKER USING SHOULDER PAD RACK TEMPLATE AS A GUIDE
- 4) SECURE SHOULDER PAD RACK TO TOP OF UPPER SHELF WITH #10 X 3/4" WOOD SCREWS THAT ARE PROVIDED

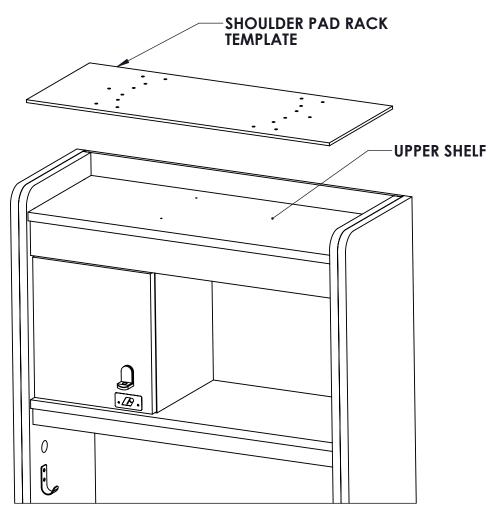

ORIENTAION
LEFT FACING
FRONT FACING
RIGHT FACING

ECO

SPECIFIED INCHES XX. ± .010 XXX. ± .005

FRACTIONAL

X/X. $\pm 1/64$

ANGULAR $\angle \pm 1/2^{\circ}$

REV

REVISIONS

DATE

ΒY

Tel (954) 429-9155

Fax (954) 428-3843


DRAWING NO. REV.

SA4106

SHOULDER PAD RACK

TEMPLATE INSTRUCTIONS

DESCRIPTION

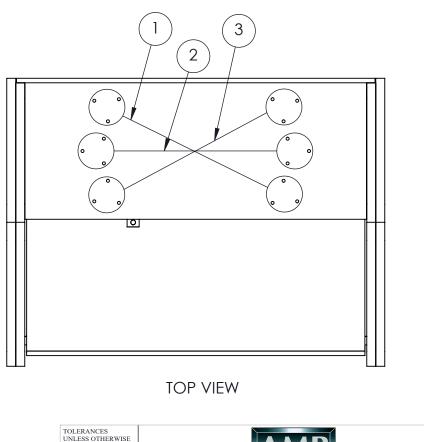

401 Jim Moran Blvd., PO Box 9601

DATE

11/17/2017

DESCRIPTION

SCALE SHEET PART NO.

OF 1

Deerfield Beach, FL 33442

CHECKED BY DATE

DRAWN BY

MGJ